

# SKE011 TREAT-WAITING CHAIR



**Healthward** uk

Healthier your life

# **SKE011**

### FEATURES AND HIGHLIGHTS

**Design:** Simple overall design, ergonomically designed to prevent deformation from prolonged sitting. **Seat and backrest:** Seat and backrest are made of PU material, one-piece foam molding. Seat board width of 520mm with a tolerance of ±3mm, molded PU color. Durable and sturdy with good oil resistance, aging resistance, mold resistance, abrasion resistance, and eco-friendly non-toxic properties.

#### Technical parameters

Overall dimensions (3-seater with armrest)	1770L×605W×845H ±5mm
Center distance	605mm±10mm
<ul><li>Seat width</li></ul>	520mm±10mm
Seat depth	450mm±10mm
Seat height from the ground	440mm±10mm
<ul> <li>Seat top depth</li> </ul>	605mm±10mm
<ul> <li>Seat top height from ground</li> </ul>	845mm±10mm
Armrest top height from the ground	600±10mm
<ul> <li>Weight</li> </ul>	52.5KG/roll



#### Seat support frame

Built-in iron frame and iron plate, formed by mold cold pressing and welding. Use 1.2mm high-quality cold-rolled steel plate for the iron plate, special high-speed CNC punch press with dedicated punching die for punching. After cold pressing, the iron plate is welded with the iron frame to form a whole. Load capacity up to 250kg.



#### Armrest leg

Made of high-quality aluminum alloy diecasting, surface treated with electrostatic powder coating. Armrest length of 385mm, armrest height from the ground of 600mm, chair leg length of 620mm. The armrest is in the shape of an inverted triangle with strong lines. The chair legs are designed in the shape of a golf club. The special non-slip foot pads are used to grip the floor and make no noise when in contact with the floor. The foot pads are not exposed, which is convenient and hygienic, with a strong sense of fashion and stability.



#### Crossbar

Load-bearing beam made of 60mm diameter, 2.0mm thickness hexagonal steel tube, processed with drilling and rust removal, and surface treated with electrostatic powder coating. Good load-bearing capacity, elegant appearance, smooth and flat surface, easy to clean.




#### Adjustable foot pads

Built-in PP foot pads, aesthetically pleasing.



#### Fasteners

Seat back and load-bearing beam connected with M8\*25 flat head hexagon screws for assembly.
Seat back and load-bearing beam connected with M10\*80 round head hexagon screws, solid and durable.

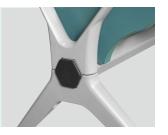

#### ΡU

Regular color of PU color card is optional.

















Design

Research

Manufacturing

Maintenance

Service



#### USA

Saikang Medical Technology, Inc. 17800 Castleton St Ste 180, City of Industry, 91748, California. Tel.: +1 949648 2776

#### United Kingdom

**UK Healthward International Ltd.**Dept. 111, 196 High Road Wood
Green, N22 8HH, London.
Tel.: +44 2032399738

#### Russia

**Saikang Medical Russia LLC** Truda 174, 454080 Chelyabinsk. Tel.: +7 (351) 2145566 / 8811 / 1516

#### East Africa

Saikang Medical Solutions Ltd. Viraj Complex Unit 3, Mombasa Road, P.O. Box 14262-00800, Nairobi. Kenya. Tel.: +254 733 704 690

#### Middle East

Saikang Medical Supplies LLC X22-S03 England Cluster, International City, Dubai. United Arab Emirates. Tel.: +20 128 8962497

## **Healthward** uk

Chengdu Saikang Medical Equipment Co., Ltd. STOCK CODE: 870098

- No.1, 5th Floor, Building 5, No.360, Wuke West 5th Road
- export@health-ward.com
- www.health-ward.com







Company video

General catalogue